




ThinkPad X1 Carbon Wireless Card Replacement

This guide will walk you through replacing the wireless card in your ThinkPad X1 Carbon

Written By: Mike

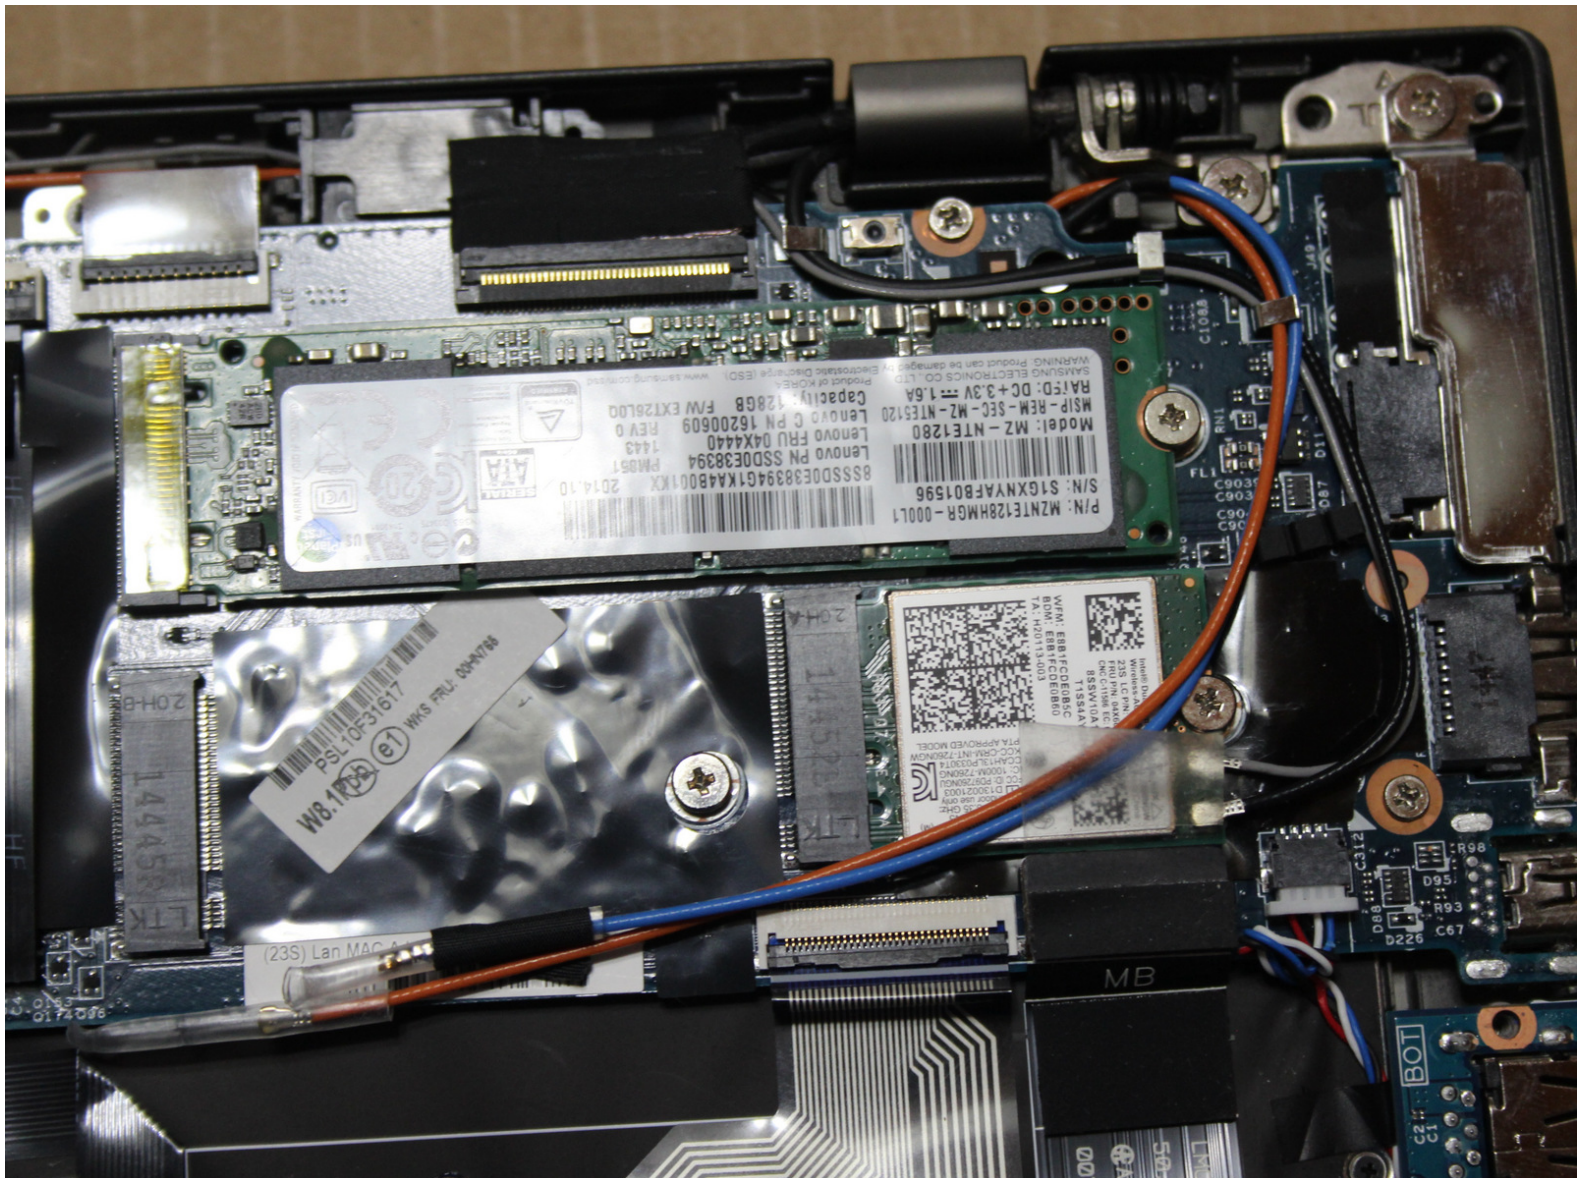

INTRODUCTION

In this guide, you will learn how to open the ThinkPad X1 Carbon and replace the wireless card.

Step 1 — Loosen Cover Screws




- Using the #0 Phillips screwdriver, loosen the seven cover screws. they will not come all of the way out.

Step 2



- Using the spudger pop the cover loose and remove.

Step 3 — Disconnect Battery

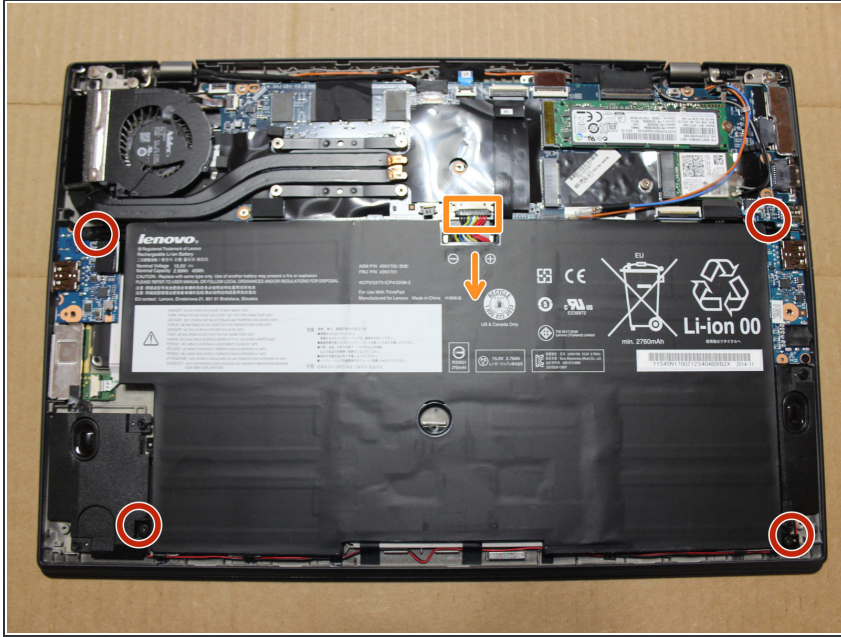


- ⚠ Use only plastic tools to disconnect battery cable
- Slide battery connector in the direction of the arrow to disconnect.
- ⓘ You can leave the battery or remove it using the red circles for the screw locations.

Step 4



- Remove screw holding the wireless card in place.

Step 5 — Remove Antenna Cables

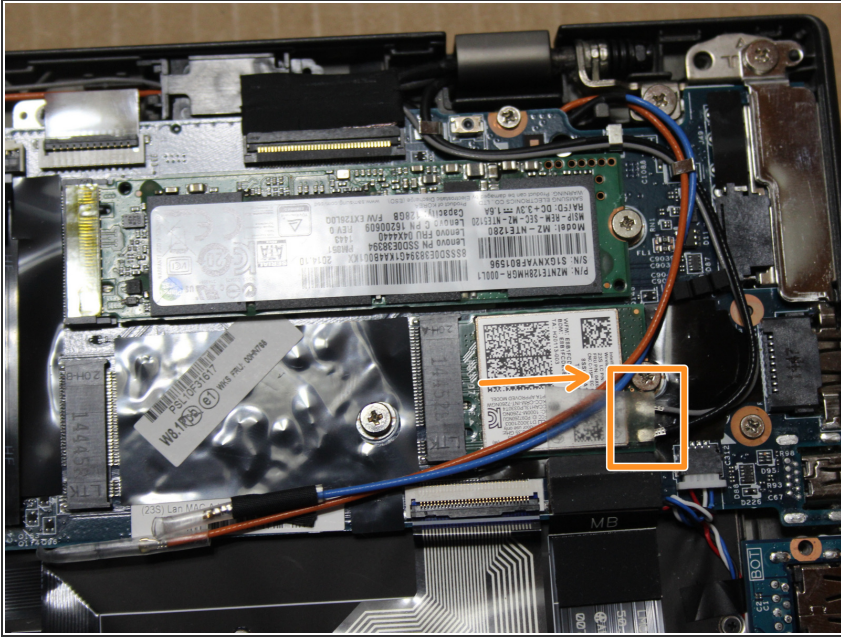

- Carefully remove the antenna cables and slide out the card in the direction of the arrow.
- ⓘ The gray connector is on the top. The black connector is closer to the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:46:44 AM.